


MODEL 207.4

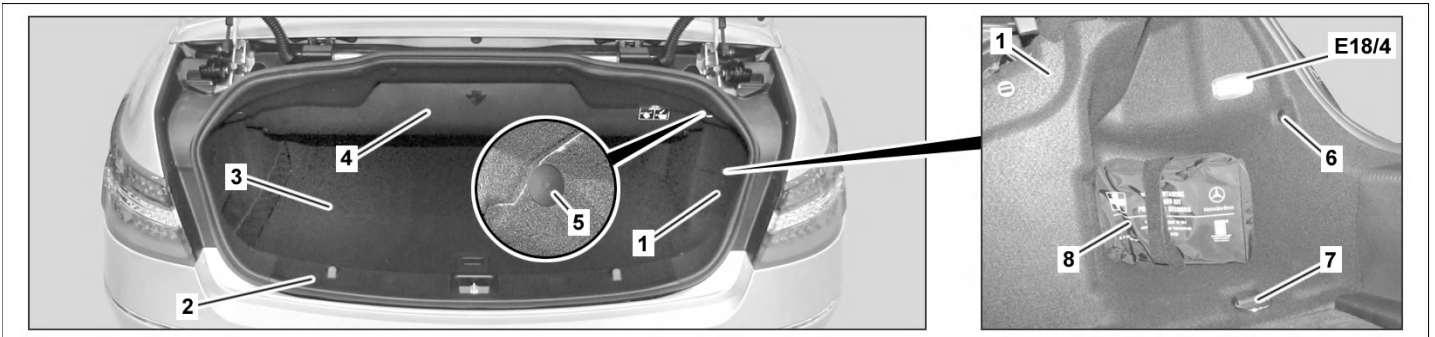

P68.30-3521-07

Shown on right side of vehicle


- 1 Side paneling
- 2 Rear center section paneling
- 3 Spare tire well paneling
- 4 Retractable partition

- 5 Screw clip
- 6 Expansion clip
- 7 Anchoring lug
- 8 First-aid kit


E18/4 Right luggage compartment lamp

Shown on right side of vehicle

- 1 Side paneling
- 9 Gas-operated strut
- 10 Clip

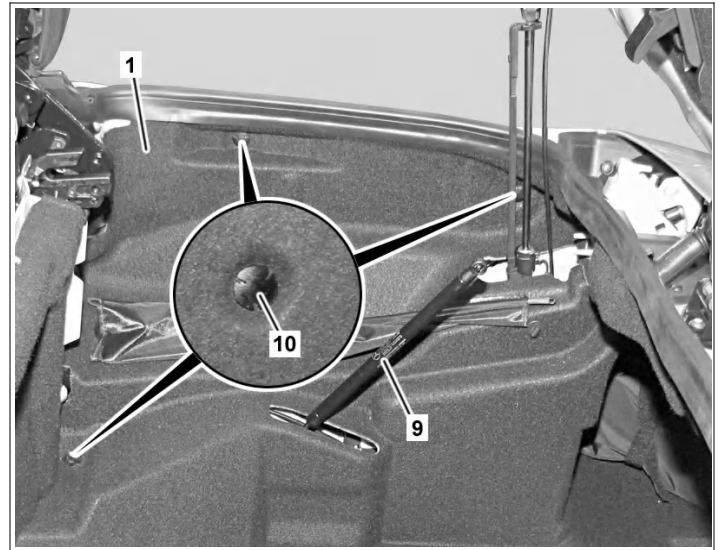

P68.30-3522-11

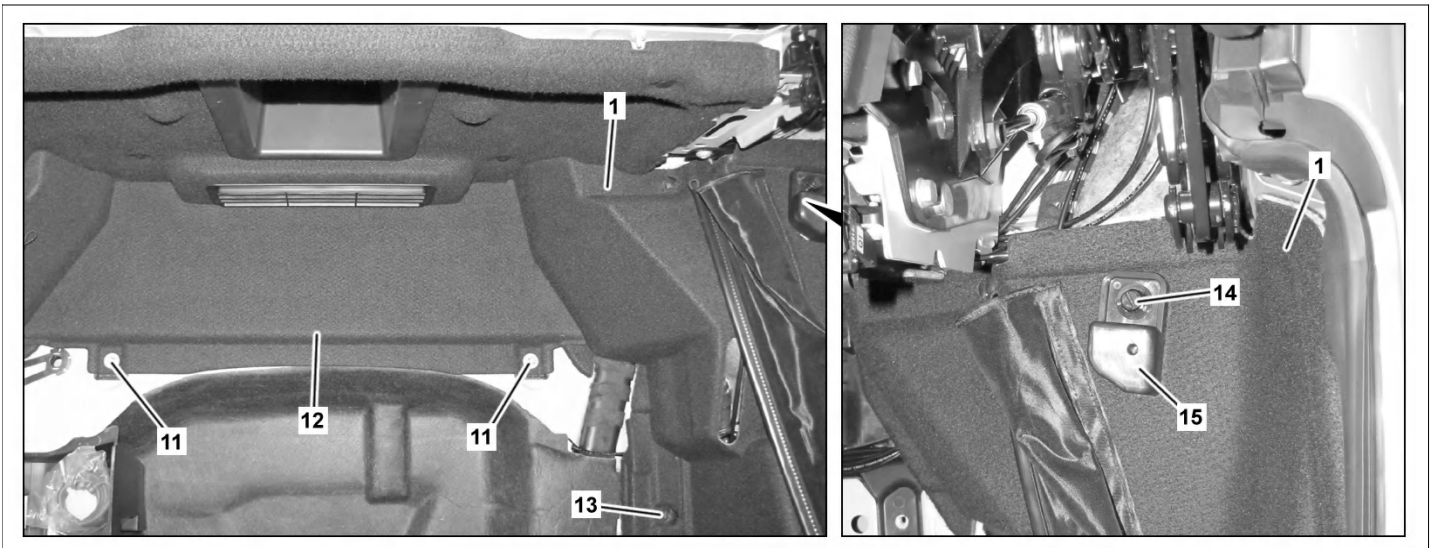

P68.30-3523-08


Shown on right side of vehicle

- 1 Side paneling
- 11 Screw

- 12 Trunk floor paneling
- 13 Clip

- 14 Screw
- 15 Stop

☒ ☒	Remove/install		
1	Remove spare wheel well trim (3)		
2	Remove rear center section paneling (2)		
3	Unscrew screw clip (5) on left and right side paneling (1)		
4	Remove expansion clip (6) from side paneling (1)	☒ Mounting wedge	*110589035900
5	Remove anchoring lug (7)		
6	Remove first aid kit (8)	Only when removing right side paneling (1).	
7	Remove right trunk lamp (E18/4)	Only when removing right side paneling (1). ☒ Do not disconnect electrical connector.	
8	Loosen side paneling (1) from trunk lid sealing frame	☒ Do not remove trunk lid sealing frame from body, otherwise it is necessary to replace trunk lid sealing frame.	
9	Lift side paneling (1) out in rear area so that it is possible to remove the side paneling (1) through the open soft top later.		
10	Remove retractable partition (4)		AR68.50-P-3000EC
11	Remove gas-operated strut (9)	☒ Do not remove retainer from gas-filled strut (9), otherwise the tension of the retainer is not longer ensured.	
12	Remove clips (10)		
13	Loosen side paneling (1) from soft top sealing frame		
14	Remove bolts (11)		
15	Remove trunk floor paneling (12)		
16	Remove clip (13)		
17	Loosen bolt (14) until end stop (15) can be removed		
18	Remove end stop (15)		
19	Remove side paneling (1)		
20	Install in the reverse order		

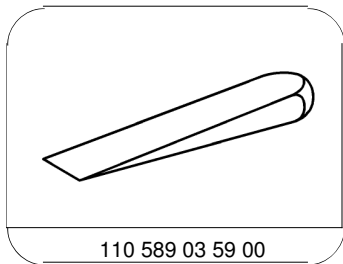

110 589 03 59 00

Mounting wedge